
BLUE AURA

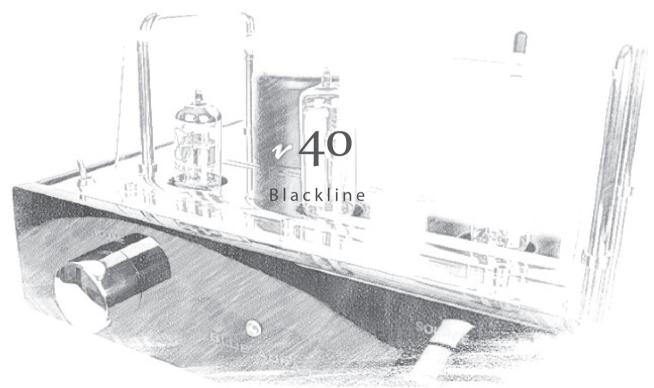








We hope you enjoy this product as much as we have enjoyed developing it. Please unpack the products carefully and take a moment to read the instructions.

Contents



• v40 vacuum tube stereo amplifier

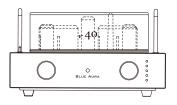


• 1 x Amplifier



• 1 x Remote control



• 1 x Line out RCA cable

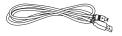

• 1 x Line out USB cable



• 1 x Line out 3.5mm cable



• 1 x Power Cord



• 1 x Antenna



• 1 x Cloth

Please read the following precautions before attempting to operate the $_{v}$ 40 amplifier



All safety and operating instructions should be read thoroughly before attempting to operate this equipment

- · Retain Instructions for future reference
- · Follow all of the instructions detailed in this manual
- · Observe all safety warnings stated in this manual
- This unit should NOT be situated in close proximity to water.
- Avoid placement near bathtubs, sinks, washing machines, etc.
- · Avoid exposure to direct sunlight or to extremes of temperature or humidity
- Do not place near direct heat sources such as radiators, stoves, gas fires, naked flames or candles.

- Ensure that the unit is placed on a clean, dry and flat surface before operation
- Do not drop the unit, apply excessive force to the controls or place heavy objects on top of the unit.
- Do not allow excessive levels of dust to gather on the ν 40.
- To clean, use a soft dry cloth. If necessary, use a damp cloth without any solvents
- Ensure that the area in which the unit is situated has adequate ventilation
- $^{\circ}$ Do not place the $\nu\,4^{
 m O}$ in a position where its ventilation may become obstructed
- Avoid placement on beds, sofas, rugs, enclosed bookcases/ cabinets and any other area which may cause interference to the ventilation of the product thus causing it to overheat
- Ensure that the unit is connected to the correct power supply as indicated on the unit.

- \bullet Unplug the $\,_{\nu}\,40$ when not in use for a long period.
- Always make sure power cables are placed safely and are not obstructing a walkway
- This product can get hot. Do not touch the tubes and keep away from babies and children
- To avoid risk of electric shock, do not attempt to remove the cover or the baseplate of the unit. There are no user serviceable parts inside.
- When this product is moved from a cool to a warm place, condensation may occur on the surface of the vacuum tubes. In this instance, allow at least 1hour before attempting to operate the unit. This will avoid leakage or blowout of the vacuum tubes due to sudden heat
- · Allow unit to cool completely before cleaning
- Do not attempt to clean the product with chemical solvents as this may damage the finish of the $\,\nu\,40\,$



- The $_{v}40$ should be serviced by an authorised service engineer in the event of any of the following circumstances
 - 1. The power supply or cord sustains damage
 - 2. The unit is struck by a falling object
 - 3. The unit is exposed to rain or moisture
 - 4. Liquid is inadvertently spilt on the unit
 - 5. The unit does not seem to operate normally or exhibits a sudden change in performance
 - 6. The unit has been dropped
 - 7. Any unauthorised changes or modifications to this equipment would render the manufacturer's Warranty null and void




ATTENTION:

To avoid damaging the vacuum tubes, the v40should only be re-started 5 minutes after switching off.


WARNING:

Be aware of the high voltage area around the vacuumed tubes

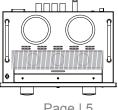


Page | 5


Front Of v40

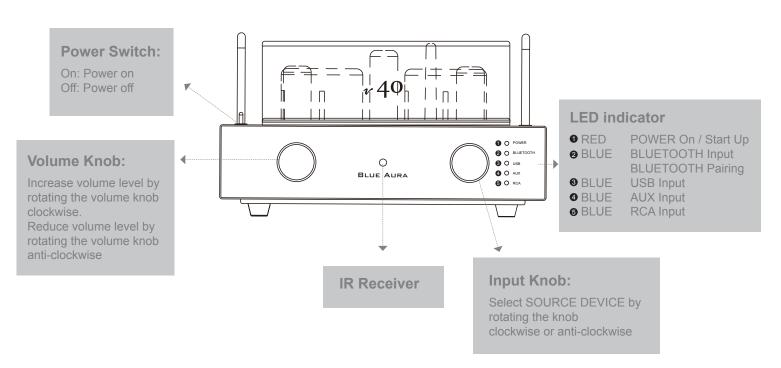

Bluetooth Pairing

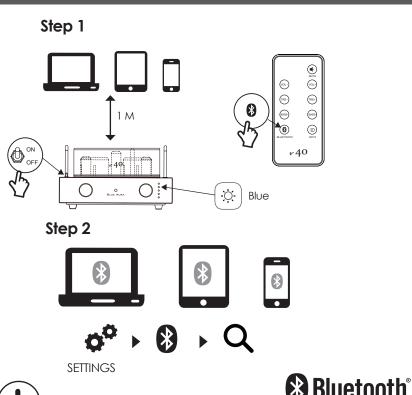




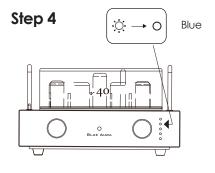






v40 Connections

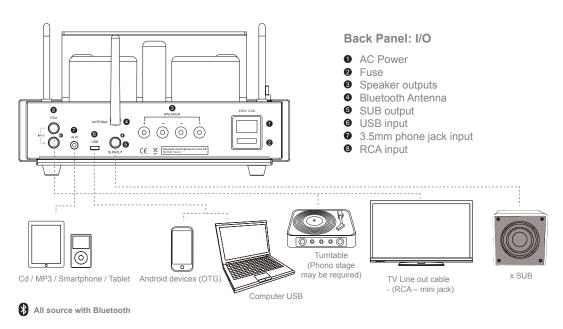

Page | 8

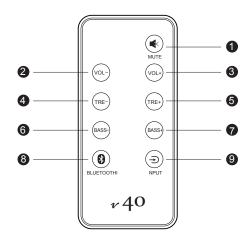

1 MUTE

2 VOL -

3 VOL +

4 TREBLE -

6 TREBLE +

6 BASS -

7 BASS +

8 BLUETOOTH

9 INPUT

Increase volume by pressing VOL+
Decrease volume by pressing VOLMaximum / Minimum Value > Power LED FLASH 3 Times.
Mute volume by pressing MUTE > Power LED steady FLASH

TREBLE AND BASS CONTROL

Increase Treble by pressing TRE+ Decrease Treble by pressing TRE-Increase Bass by pressing BASS+ Decrease Bass by pressing BASS-

Maximum / Minimum Treble and Bass > Power LED Flash twice. Treble and Bass has a +3 / - 3 step adjustment and returns to default when the amplifier is powered off.

INPUT

Select SOURCE DEVICE by using the INPUT button (9) on the remote control

BLUETOOTH CONNECTION

Briefly press the Bluetooth button (8) The LED flashes Blue and enters pairing mode.

RESET

Hold "Mute Button" For 2 Seconds and release An audible beep will confirm Reset (Default volume setting and erase all BT devices in memory)

VOLUME CONTROL

^{*} Treble and Bass has a +3 / - 3 step adjustment



How to connect

Amplifier

Before attempting to make any connections to or from the ν 40, firstly ensure that the amplifier and all connecting devices are switched OFF.

When making connections to other devices from the $_{\rm r}40$, take the time to ensure that they are correct, for instance, (L) Left to (L) left, and (R) right to (R) right.

Always turn the power switch to the OFF position when making connections or disconnecting the ν 40.

When using the USB plug to connect to a PC or Laptop the software will automatically install. A message window or beep will confirm successful installation.

Do not switch on the $_{\rm v}$ 40 until after you have connected the AC power lead

Loudspeakers

Connecting loudspeakers to the ν 40.

Please note that if the speaker cables are not connected properly you may hear no sound, or if the polarities are reversed, you will hear oddities in the signal path with an unnatural loss of bass frequencies.

Make sure the terminals on the rear of the ν 40 are firmly screwed in to prevent wires from becoming loose. If wires touch each other, the speakers and/ or the ν 40 could be damaged.


Subwoofer

When using a subwoofer with the $\,\nu\,4^{\rm O}$, allow the amplifier to warm up for at least 20 seconds before playing music.

Troubleshooting

If your v40 system fails to operate normally, please check the following points to determine if the fault can be corrected with one of the suggestions below.

If you feel your system is still faulty after reading this, please contact your authorised dealer or Service centre or email support@blueaura.co.uk

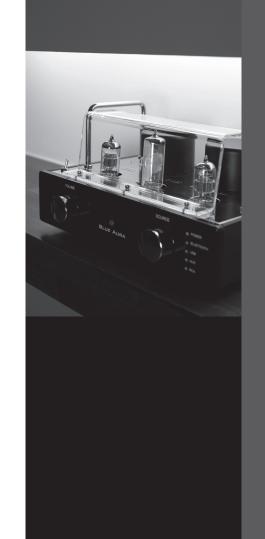

Troubleshooting

No Power	Power adaptor is not connected properly Mains supply is off If using Remote, battery needs replacing	Make sure power adapter is firmly plugged in. Test with another appliance /different socket. Replace battery Replace mains fuse - a spare fuse is located in the fuse drawer directly below the mains input socket.
No sound from speakers	Volume control is turned down Speaker cables not connected Source selection incorrect	Check volume control on front of \$\v40\$ and volume control on remote control Check connections on rear of \$\v40\$ and speakers Check Source selection
Remote control not working		Replace battery Point the remote control in the direction of the +40 within 20ft (6.1M)
Distorted sound	Volume level is set too high Source device sound level is set too high	Decrease volume of +40 Decrease output level of source device
Acoustic image has insufficient low range tonal quality	The speakers have not been wired correctly and are "out of phase" with each other	Ensure that the red (+) and black (-) wires have been correctly connected at the speakers and +40.
Radio interference	Equipment is situated too close to a radio	Move the speakers or amplifier away from the radio.
All LED steady in BLUE	The v40 has entered protection mode	Turn off the amplifier for 5 mins

Specifications & Features

Amplifier

Power Output 30W per channel

Freq. Response. 23Hz - 100 KHz +/- 2dBHarmonic Distortion 30W / 0.7%, 1W / 0.18%

Signal To Noise Ratio 88dB 'A'-weighted / 66 dB FLAT

Input Impedance 50K Ω

Input Sensitivity 580mV +/- 5% @30W

Output Impedance $4/8 \Omega$

Vacuum Tube Type 12AU7 x 2 6e2 x 1

Audio Inputs BLUETOOTH/RCA/Micro USB/3.5mm mini jack

Audio Outputs Sub out (20Hz~850Hz)

Power Supply AC 230V/50Hz AC 115V/60Hz

Dimensions: H: 148mm W: 264mm D: 215 mm

Weight 3.5Kg





Blue Aura Worldwide Guarantee

This entitles you to have the unit repaired free of charge, during the first year after purchase, at any authorised Blue Aura distributor provided that it was originally purchased from an authorised Blue Aura dealer or distributor. The manufacturer can take no responsibility for defects arising from accident, misuse, abuse, wear and tear, neglect or through unauthorised adjustment and/or repair; neither can they accept responsibility for damage or loss occurring during transit to or from the person claiming under the guarantee.

The warranty covers: Parts and labour costs for first year from the purchase date. After one years you must pay for both parts and labour costs, the warranty does not cover transportation costs at any time

Claims under guarantee:

This equipment should be packed in the original packing and returned to the dealer from whom it was purchased, or failing this, directly to the Blue Aura distributor in the country of residence. It should be sent carriage prepaid by a reputable carrier. No responsibility can be accepted for the unit whilst in transit to the dealer or distributor and customers are therefore advised to insure the unit against loss or damage whilst in transit.

All Blue Aura products undergo exhaustive tests and inspections both before and during manufacture to ensure we deliver products of the highest quality. However, for complete peace of mind please register your product within 30 days to take advantage of our extended 12 month guarantee.

Please register your product on line at http://www.blueaura.co.uk/register

Thank you for purchasing our product.

Please visit our website to get more information.





BLUE AURA

www.blueaura.co.uk Telephone +44 (0) 1480 477738 Email info@blueaura.co.uk